



## How to set Caller ID via Hyper Terminal

## 1. Under Hyper terminal:


- Start -> Accessories -> Communications -> Hyper Terminal

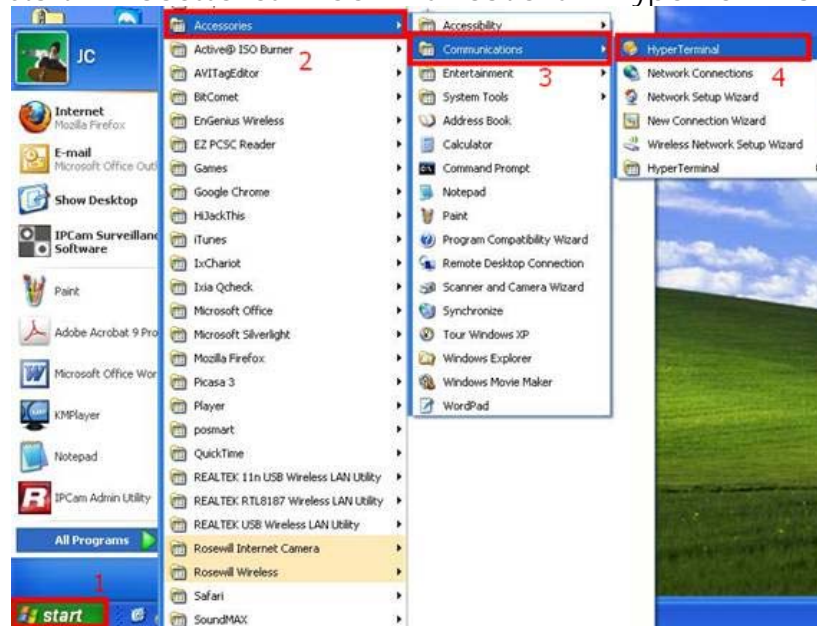

- Enter your desired Connection Name, Click "OK"

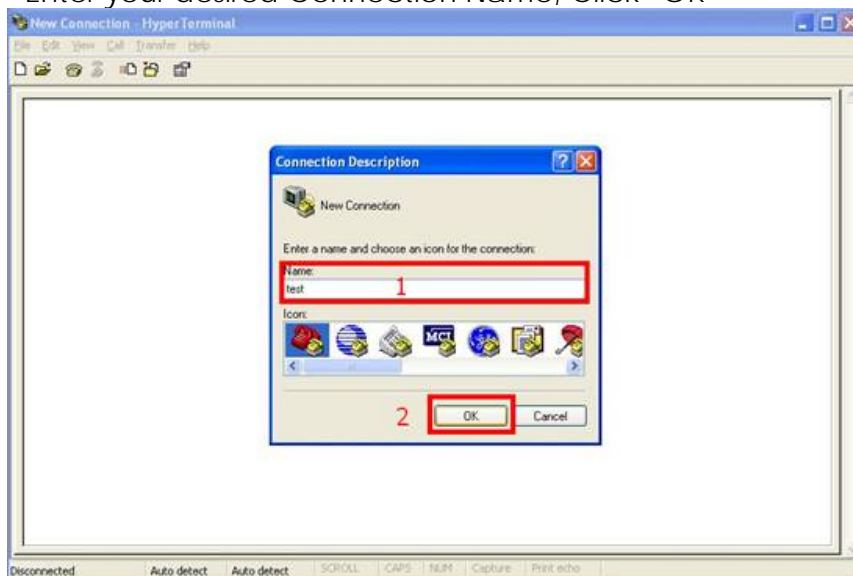

- Follow below guide:

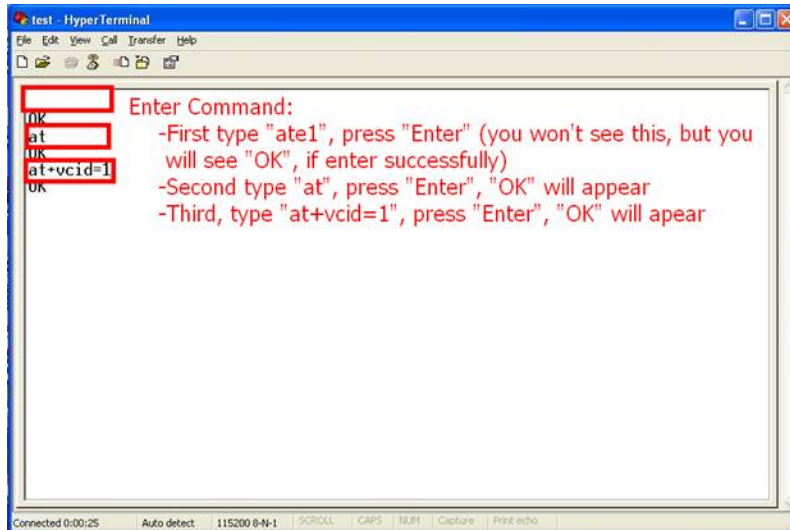

- Your Hyper Terminal will show Caller ID when call received

