


## DEFAULT BUTTON FUNCTIONS

- 1.Left Click
- 2.Right Click
- 3.Scroll Wheel
- 4.Forward
- 5.Back
- 6.DPI+
- 7.DPI -
- 8.Fire Key
- 9.Adjustable Weight System

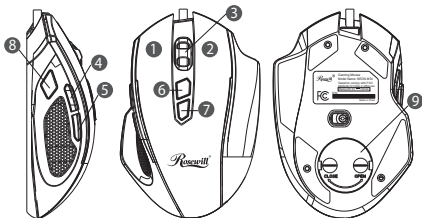

\* Press scroll wheel + forward button to change backlight modes.


## INSTALLATION INSTRUCTIONS

- 1.Plug the USB connector of the **NEON M54** to a USB port on your PC or laptop.
- 2.Select the right side plate for your preferred hand grip.
- 3.Search the keyword “NEON M54” at [www.rosewill.com/downloads](http://www.rosewill.com/downloads) and download the driver.
- 4.Unzip the file and double-click “NEON M54.exe” to start the installation program.
- 5.Installation will run automatically; click “Finish” to complete the installation.

## SPECIFICATIONS

Interface	USB
Acceleration	10G / 30 IPS
DPI	800/1600/2400/4800/6000/7200
Polling Rate	500 Hz
Backlight	RGB
Cable Length	5.9 ft (1.8 m)
Dimensions	4.92 x 3.03 x 1.65 in (125 x 77 x 42 mm)

## SOFTWARE OPERATIONS

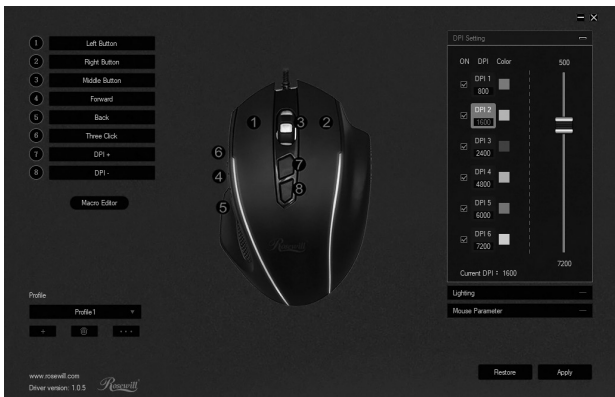

Via the software suite, you can adjust button configuration and customization.

You can save configurations to maximize your gaming experience in every game you play.

## SYSTEM REQUIREMENTS

1. MS Windows Series: Win 7/8.x/10 and above
2. Available USB 1.1/2.0 Port and above
3. 50 MB Free Hard Disk Space

## PACKAGE CONTENTS

- NEON M54 Gaming Mouse
- 1 x Interchangeable Side Plates
- User Manual

**Rosewill**<sup>®</sup>

Technical Support Information [techsupport@rosewill.com](mailto:techsupport@rosewill.com) 1-800-575-9885  
Please register your product at [www.rosewill.com](http://www.rosewill.com) for complete warranty information and support for your product.

**FC**

NEON M54\_B