



Parallel 1-Port ExpressCard

RC-614

User Manual



Features and Benefits

- Fully compliant with ExpressCard Specification 1.0
- ExpressCard/34 Form Factor Module
- No IRQ, DMA, I/O Address resources required
- Hot swappable
- Easy plug & play
- Single Printer Port Interface
- Supports Windows® 2000, XP/2003 32/64 bit, Vista 32/64 bit

System Requirements

- Windows® 2000/XP/Server 2003/Vista
- ExpressCard-enabled system with an available ExpressCard slot

Package Contents

- 1 x RC-614
- 1 x User Manual
- 1 x Fan Out Cable (DB26 Male to DB25 Female)

Hardware Installation

General instructions for installing the card are provided below. Since the design of system may vary, refer to your system's reference manual for further information, if needed.

Insert the Card into the ExpressCard slot of your system. Make sure it is inserted all the way in for a solid connection.

Thank you for purchasing a quality Rosewill Product.

Please register your product at :

www.rosewill.com for complete warranty information and future support for your product.