

Declarations

The user manual is for reference only, the different version have different functions, which are subject to Machine Contents!

Key Function Instructions

The products have three key buttons; including "up key", "down key", "menu key"; but "up/down keys" are used for changing the photos for forward/back, up/down menu moving, time/number adding/deducting etc, "menu key" opens up the main menu, confirms selections etc.

Working Pattern Instructions

Photograph Browsing Pattern

When the system starts, DPF is in the state of an acquiesce photos pattern. Under this patter position, photos can be browsed.

The time clock display pattern

- Under the photo browsing pattern, press Up/Down key button; which can exchange to the time clock display pattern; press menu key button back to the photo browsing pattern,
- Under the photo pattern, press menu key, enter into the main menu, selecting time clock display menu, which can enter into time clock pattern.

Menu selection and setting patter

Under the photo browse pattern position, press menu key button, which it can pop up the main menu function, it use for delete the photos, system setting and display time clock etc.

Turn on/turn off pattern

Turn off

- Under the photo pattern position: Press menu key: pop up main menu; select first item (turn off the system), and then enter into power off pattern, except the time clock is still working, another have stopped to work, at this time which is the most save electricity
- When setting the auto turn on/off, under the time clock reach auto power off time, enter into power off pattern at once
- When no pressing actions, it will be entered into half brightness position at six second, and when no pressing actions which enter into auto power off at three minutes

Turn on

- Under power off pattern, press menu until the displayer appearance, that's turn on completely
- When setting the auto turn on/off, under the time clock reach auto power on time, and the auto turn on the system, enter into power on pattern at once,

USB cable pattern

USB cable pattern: It has two patterns such as USB charging electricity and USB download.

At any time, the USB connect computer which can pop up selection menu, USB charging and USB download.

- When select USB charging pattern, and back to the normal working pattern, the USB cable charge the battery only.
- When select USB download pattern, it can download the pictures from the computer. As charging and download the pictures is ok, unplug the USB attachment plug. Enter into photo display pattern automatically.

Menu Instructions

Under photo pattern, press menu key short time, pop up menu such as:

- Power off
- Delete picture
- Photo display pattern
- Time clock setting
- Auto turn on/off set up
- Time clock display
- Back to the menu

Notice

Turn off the menu item

After use "menu key" select power off menu after, enter into power off pattern, except the time clock, other functions stop working, at this time which is the most save electricity.

Delete Photos

If you want to delete the pictures, press up/down button to the photos appearance, and then press "menu key", selecting "delete" item, at this time the system pop up the notice "confirm" or "cancel". If it notice appearance in three second and repress the "menu key", and then appearance photo is deleted at once and auto back to the photo pattern, display next photos: if it doesn't, press up/down key in three seconds, and then auto cancel the operation.

Photo display pattern

There are two display photos styles, such as auto play and hand control play. Automation playing can set up two photographs to change time voluntarily across between being 0-180 seconds, Hand control playing only can be exchanged photos by up/down button.

Time clock setting

Enter into time clock pattern, which can modify the year/month/day/hour/minute/second and according to year/month/day to update the weeks automatically. Firstly year setting, press up/down button can adjust year, press menu key can jump to the month setting and so on, and then finished the second setting which press "menu key" back to the main menu.

Auto turn on/off setting

Enter into auto turn on/off setting menu, there are two selections:

- Open up the auto turn on /off function
When it open up the auto turn on/off function later and enter into set up the turn on/off time automatically. It can be set up auto turn on/off time,
- Close the auto turn on/off function
Close the auto turn on/off function

Time clock display

The LCD show year/month/day/hour/minute/second or weeks.

Back to the menu

Back to the main menu and photo pattern automatically.

Photo Download Instructions

- Plug USB cable at any time, the product can pop up USB charging and USB download menu, Selecting USB download menu, and then enter into download pattern, at this time the PC display a subjunctive logo of moving hard disk, but the disk can't be operated.
- Copy the file from the CD to your hard disk.
- Operating the PC download software it will clue the upload information to the user, and upload the ready photos to the PC software for editing and saving. If there are no pictures, it will clue wrong, but the user can ignore it.
- Selecting the picture and file in drive, and check the picture file list, which will display all pictures and display the red dotted line frame. It can move the area of user's desire or press eraser button and delete the frame line.
- Press the Post button; it put the selecting photos to the right picture display area. In this way to operate the other pictures.
- Press the right angle download button, download all display pictures to the products until it notice successfully.

Other Instructions

- To Economize the sources of energy consumption, without any press actions at six seconds later, which the back brightness adjust half of brightness automatically. Without any press actions at three minutes, which enter into sleeping position automatically. It needs to press the menu button for restart the system.
- Plug the USB cable each time, and then needs to restart the PC download software. Otherwise it will jump the faulty notice,